



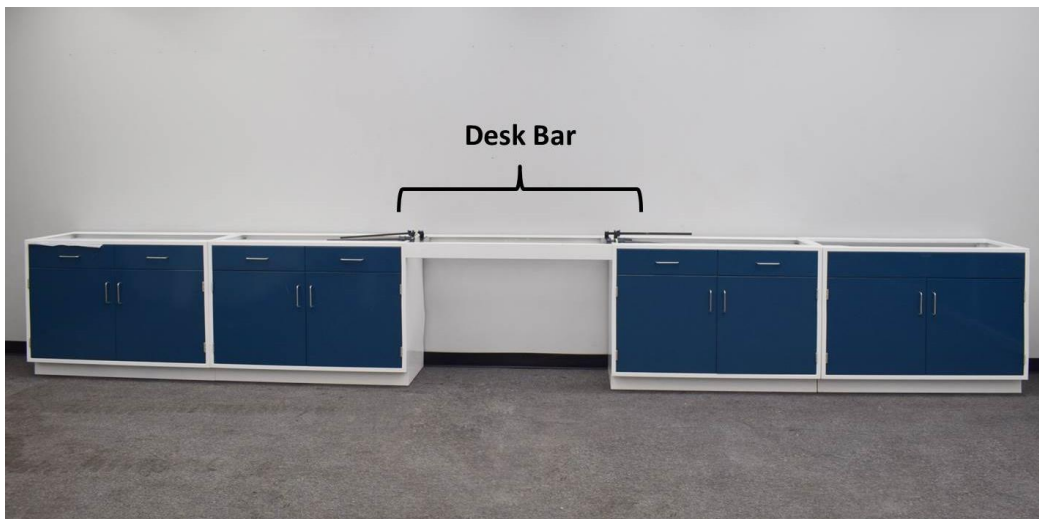

Instructions for:

# Installing Base Cabinets

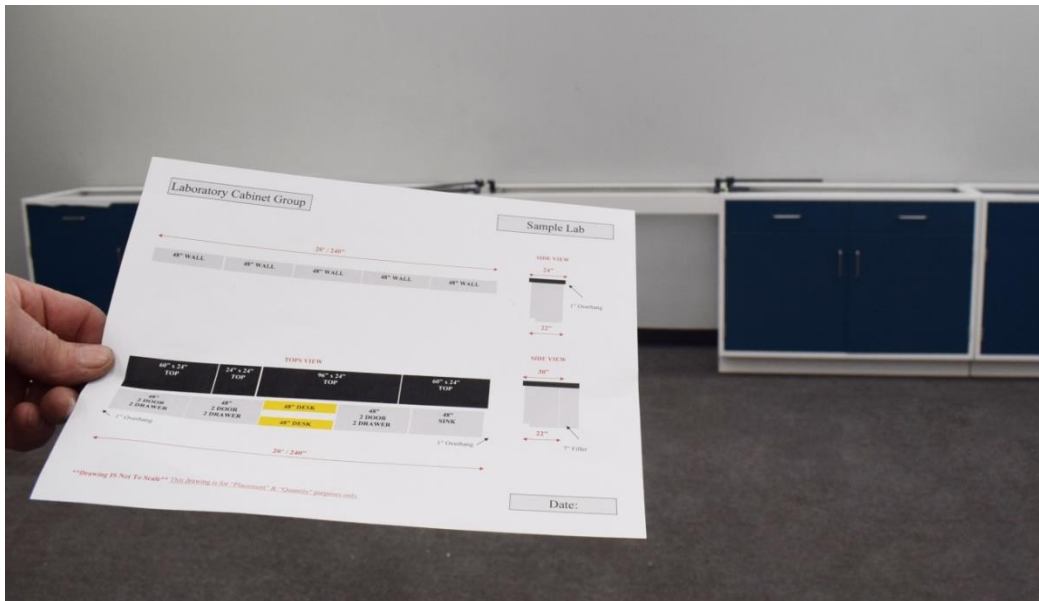

Use the provided layout drawing as a guide to position cabinets



NOTE: Shelves and brackets are located in cabinet  
If you ordered a sink and faucet, they will also be in the cabinet




For standard 24" countertops, position cabinets 1" away from walls



For 30" countertops, position cabinets 7" away from the walls.  
30" countertops also require a 7" filler




Filler is attached with a clip

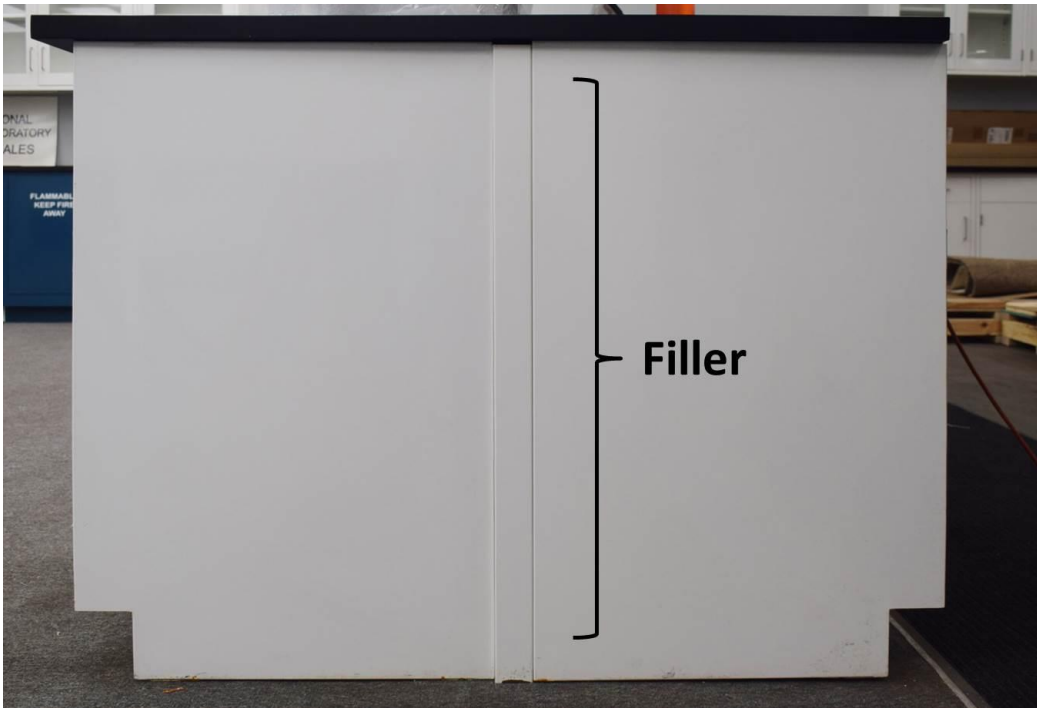

**Islands.** If your cabinet configuration has islands, a **filler** is required.  
48" islands have a 2" filler, 60" islands have a 14" filler.




Use a level to level cabinets.

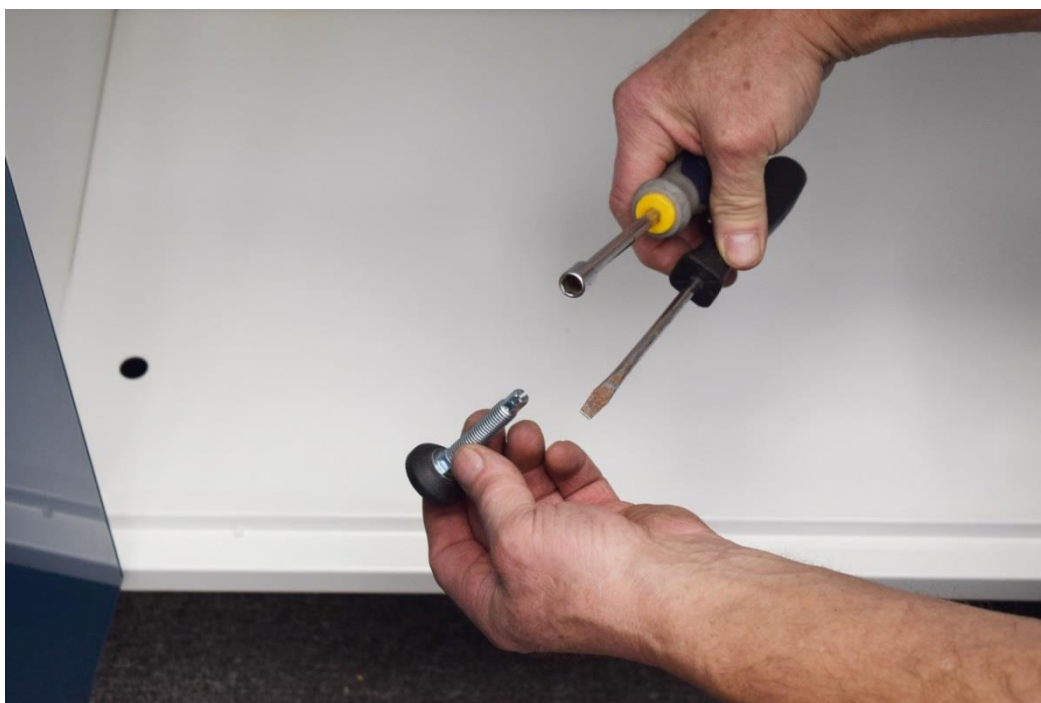

Use a driver, or standard screw driver (flat blade)



Adjust feet up or down to level cabinets

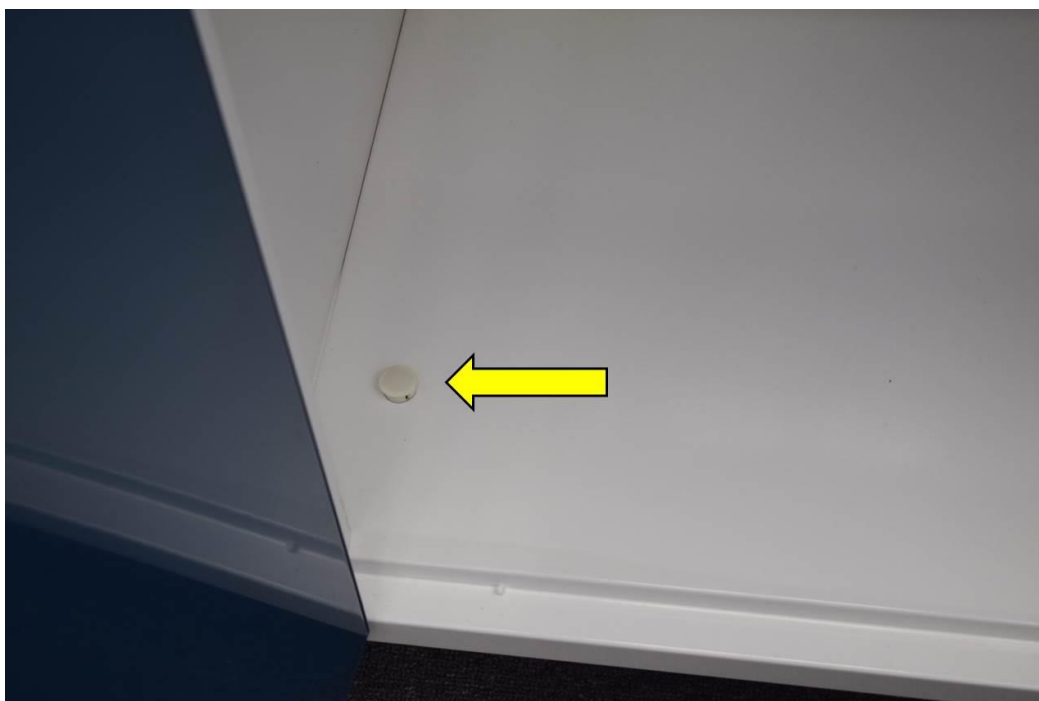

Once cabinets are leveled, use plastic caps to plug holes



Use clamps to secure desk bars



**Attach Desk Bars to cabinets** using self-tapping screws



**Attach cabinets together** using self-tapping screws

Caution: do not put screws in locations where the screw point could potentially cause injury. Using short screws and placing them near the frame rail is recommended.





Test fit **countertops** before securing




Secure countertops with a silicone or construction adhesive.

**Important: do not use too much silicone.** The countertops will be nearly impossible to remove, preventing them from being moved or reconfigured later.

For a 48" cabinet, use six drops of silicone, about the size of a quarter, 3 drops in front, and 3 in back.



After countertops have been secured, measure the dimensions (length and width) of the sink

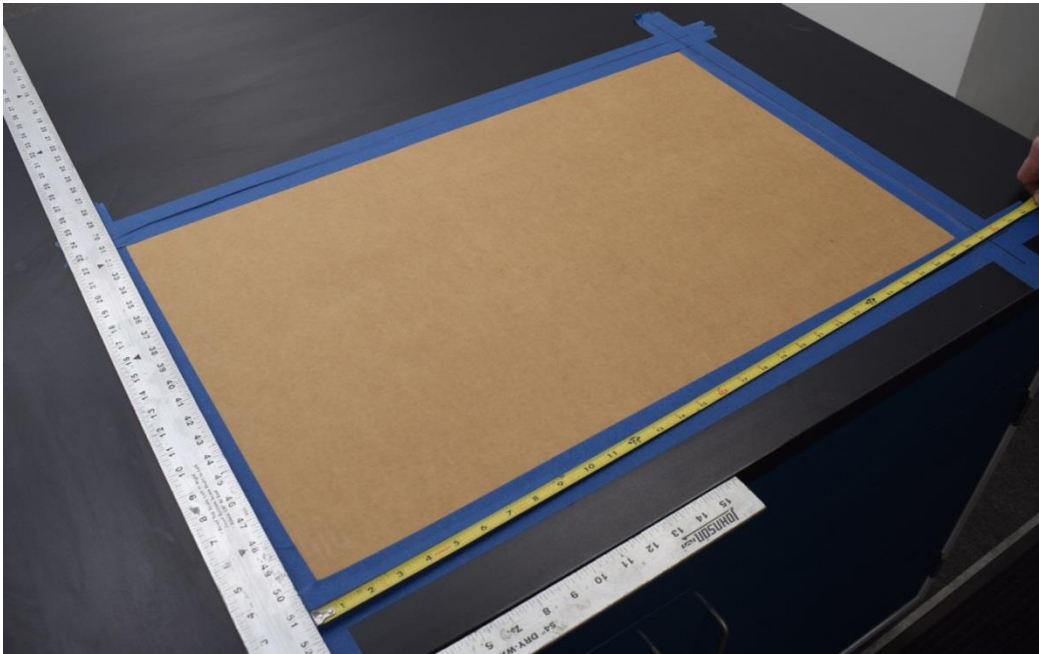

Use a straight edge and T-square to draw the outline of the hole the sink will be placed into. Use painters tape in the area you will cut, this will prevent damage when you drill and cut the opening



Drill a hole in each corner, to the inside of the outline. Stay within the lines!



Using a jigsaw, cut lines between the holes, following the layout lines

NOTE: secure the board when cutting so it will not fall through the hole and cause damage. This may require two people



Mount the faucet into the countertop



Place the sink and faucet into the hole you cut, and use the provided hardware (circled above) to secure it in place

A bead of silicone is recommended around the underside lip of the sink