



INSTRUCTIONS: UNPACKING CABINETS

- **Instructions for installation are located in one of the cabinets.**
- **Take note of everything in the crate. Do not discard anything. All components are necessary for proper installation.**
- **Carefully read all included labels and instructions**
- **SAFETY: unpacking should be done by two or more people. Use caution.**



This is how your crate arrives. Transport it to your desired location before unpacking.



Remove the sides of the crate first. Do this by locating and removing screws (locations indicated by yellow arrows below).



Remove the ends of the crate.



Use caution! Countertops are very heavy and can tip easily




Carefully start to unpack your crate. Start by removing the shrink wrap



Cut and remove banding. Start un-stacking cabinets



Locate the sink assembly

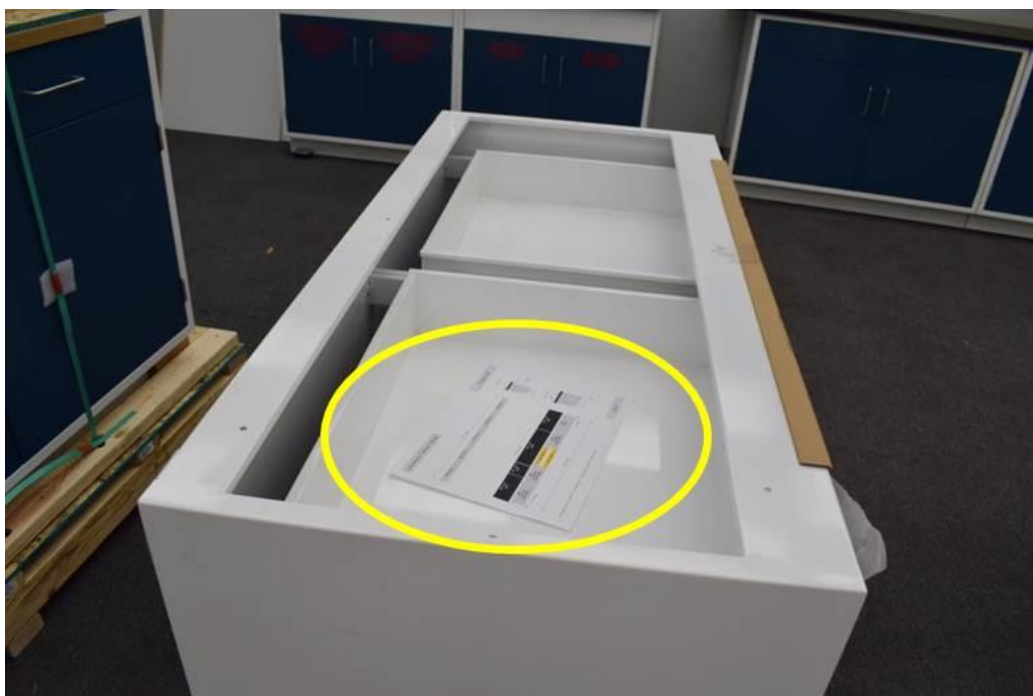

A cabinet layout drawing and installation instructions will be in one of the drawers.